



A DOVER COMPANY

Automation
Robohand FERGUSON
CAMCO

SERVICE MANUAL
RDM SERIES INDEX DRIVES
MODELS
601RDM, 902RDM, 1100RDM
1305RDM, 1800RDM

WARNING

This is a controlled document. It is your responsibility to deliver this information to the end user of the CAMCO or FERGUSON product. Failure to deliver this could result in your liability for injury to the user or damage to the machine. For copies of this manual, call your Customer Service Representative at 800-645-5207

TABLE OF CONTENTS

| | |
|---------------------------------------------|----|
| INTRODUCTION..... | 2 |
| WARNING AND CAUTIONS | 2 |
| OIL SEAL REMOVAL..... | 2 |
| SPARE PARTS KIT..... | 2 |
| DISASSEMBLY | 3 |
| REMOVAL OF OUTPUT/FOLLOWER WHEEL | 3 |
| INSPECTION & REMOVAL OF CAM FOLLOWERS | 3 |
| INPUT SHAFT/CAM REMOVAL | 4 |
| PRIOR TO REASSEMBLY | 5 |
| ASSEMBLY | 5 |
| ASSEMBLING INPUT SHAFT | 5 |
| ASSEMBLING OUTPUT SHAFT..... | 5 |
| SETTING CAM..... | 6 |
| HOW TO ORDER PARTS | 8 |
| EXPLODED PARTS DRAWING..... | 9 |
| PARTS LIST | 10 |

INTRODUCTION

This service manual pertains to the disassembly and assembly of CAMCO's RDM Series Index Drives models 80RDM, 601RDM, 902RDM, 1305RDM, & 1800RDM.

The manual is to be used in conjunction with the General Service Manual which describes the lubrication and general maintenance of CAMCO Index Drives.

An exploded view of your specific Index Drive is included in this manual. Also included is a complete Bill of Materials for your convenience in identifying and ordering spare or replacement parts.

Some users of Index Drives have the facilities and trained personnel to accomplish service repair. You must determine the extent to which intricate servicing should be done in your own facility. When in doubt, CAMCO recommends that CAMCO trained servicemen make the repairs.

WARNINGS AND CAUTIONS

Statements in this manual preceded by the words *WARNING* or *CAUTION* and printed in italics are very important. We recommend you take special notice of these during service or repair.

WARNING

Means there is the possibility of personal injury to yourself or others.

CAUTION

Means there is the possibility of damage to the CAMCO unit.

OIL SEAL REMOVAL

The only repair possible without disassembly of the indexer is replacement of oil seals. To remove oil seals, drill a number of holes into the case of the seal. The seal may then be removed with a pointed tool. Be sure to remove all metallic chips created during the drilling of removal holes. A new seal may be installed as outlined in the "Oil Seal Installation Recommendations" section of the "General Service Manual".

SPARE PARTS KIT

CAMCO offers a Spare Parts Kit for all CAMCO index drive models CAMCO builds. These kits include oil seals, bearings, shims and miscellaneous hardware. Camfollowers are sold separately. These are components that will most likely require replacement during repair of your index drive. CAMCO recommends a Spare Parts Kit be purchased and kept on hand prior to the disassembly of your CAMCO drive.

A complete list of components supplied in the Spare Parts Kit can be found in the parts list located in the rear of this manual. The asterisk behind the item number indicates those parts supplied with the Spare Parts Kit. See page 16 for additional spare parts information.

BEFORE STARTING

Before starting the disassembly of your CAMCO unit you should read and review the following instructions. These provide important information on parts and procedures necessary to successfully complete your repair. Comply with all *Warnings* and *Cautions*.

Read the "Trouble Shooting Guide" section of your "General Service Manual" before disassembling CAMCO units. CAMCO recommends returning defective equipment for inspection and repair whenever possible.

CAMCO uses Loc-Tite to secure all screws and setscrews. If you encounter a fastener that is difficult to remove, apply heat to the screw and remove while still warm.

DISASSEMBLY

1. REMOVE ALL ACCESSORY EQUIPMENT such as clutches, reducers, sprockets, etc. If equipped with a CAMCO R250 Reducer see disassembly instructions manual 0079 pertaining to this reducer prior to removal from the unit.
2. DRAIN OIL AND FLUSH UNIT with flushing solvent. Retain any chips or broken pieces you may find. These may aid in diagnosis.
3. REMOVE BOTTOM COVER.
4. REMOVAL OF OUTPUT SHAFT.
 - A. Remove the capscrews holding the large output bearing retaining ring.
 - B. Drive the two dowel pins through the retaining ring and housing with an undersize punch.
 - C. Lift the output/follower wheel from the housing. Save the retaining ring shims for later installation.



Fig.1 Output shaft removal

5. FOLLOWER INSPECTION.

Inspect followers for damage or radial looseness. It should not exceed .001 inch. Do not confuse radial looseness with axial endplay. Endplay will be from .03" to .06" as a normal condition. If it exceeds .06 it may require replacement.

NOTE: Generally, followers are replaced as added insurance against failure later.

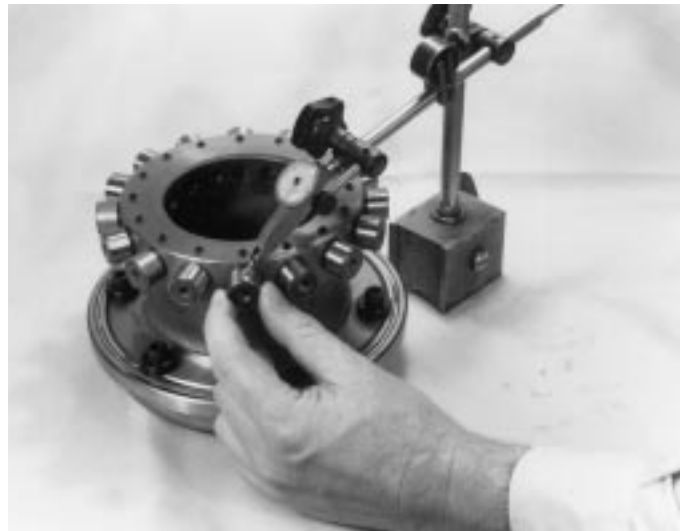


Fig.2 Inspecting for radial looseness

6. FOLLOWER REMOVAL.

Followers can be removed at this stage.

- A. Remove the setscrews. Apply heat to the setscrews holding the follower studs and remove while still warm.
- B. Threaded holes have been provided in the ends of the follower for ease of removal. Use a slide hammer or a simple self-made pull tool. The self-made pull tool consists of a short piece of round tubing, large enough to clear the follower diameter and a small flat bar with a clearance hole large enough to insert a capscrew of equal thread size as the follower pull hole. Slip the tube over the follower, place the bar over the tube and thread a capscrew into the follower. Tightening the capscrew will remove the follower.



Fig.3 Follower pull tools.



Fig.3A Follower pull tools in use.



Fig .4. Removing output bearing.

7. CHECK THE FOLLOWER HOLES.

Check the follower holes for roundness. These holes may be worn out due to overloads. The holes should be round to within .0005 to permit reuse of the follower wheel.

8. OUTPUT SHAFT DISASSEMBLY.

- A. Turn output shaft over and tap on back side of retaining ring, alternating from side to side until the retaining ring is free of the output/follower wheel.
- B. Remove the main bearing from the output/follower wheel.
 - 1) Remove the bearing retaining capscrews and washers.
 - 2) From the top side of the output, place a small aluminum bar against the inside face of the bearing and tap with a hammer. Alternate from side to side to prevent cocking until the bearing is free of the output/follower wheel.

9. INPUT SHAFT / CAM REMOVAL.

NOTE: The output shaft must be removed prior to input shaft removal.

- A. Rotate the input shaft and inspect all parts for damage or wear. Endplay in the input shaft is not permissible.
- B. Remove all input bearing cartridge capscrews.
- C. Tap on the end of the input shaft to drive the opposite cartridge from the housing. Then drive the shaft in the opposite direction for removal of the other cartridge.

NOTE: Keep shims with their respective cartridges. You will be asked to reinstall or replace with the same shim thickness during assembly.

- D. Remove the input shaft/cam assembly from the housing.



Fig. 5 Removing input shaft assembly

- E. Use a wheel puller to remove the bearing cones from the input shaft.
- F. Remove the cam locknuts with a spanner wrench. Be sure to bend the washer locking tangs away from the nut prior to removal, if applicable.
- G. Use an arbor press to remove the cam from the input shaft. Use caution not to damage the parts. If an arbor press is not available you may drive the shaft out by tapping on the end of the shaft with a soft face.

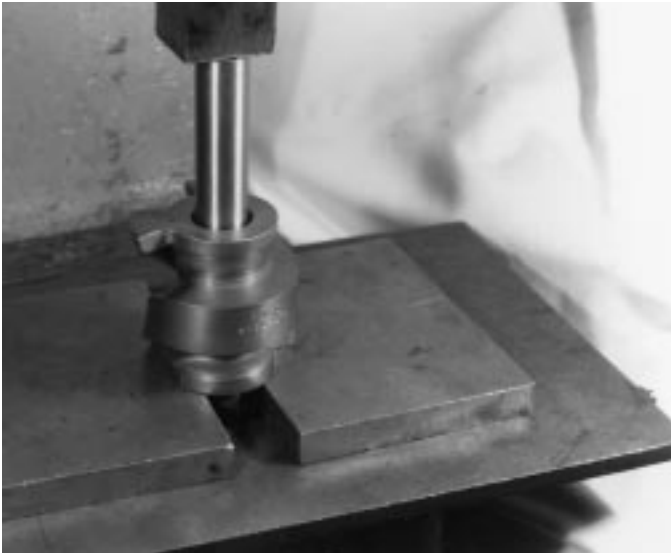


Fig. 6 Pressing out camshaft

10. REMOVE THE INPUT BEARING CUPS

Remove the input bearing cups from the cartridges with a pulley puller, by prying or by drilling and tapping for jack screws.

ASSEMBLY

PRIOR TO REASSEMBLY

Clean and deburr all parts before reassembly.

Follow tightening torque and Loc-Tite recommendations as outlined in the "General Service Manual".

- 1. Use an arbor to press the bearing cups into the cartridges. Coat the outside of the cup and the bore of the cartridge with an anti-seize lubricant prior to pressing. Fill cavity of cartridges with bearing grease recommended in the "General Service Manual".

2. ASSEMBLING INPUT SHAFT.

- A. Use arbor to press the cam onto the shaft. Be sure key is installed into the shaft first. Apply anti-sieze lubricant to shaft and bore prior to pressing. If a heat gun is available it is recommended that the bore of the cam be heated prior to pressing.
- B. Use a spanner wrench to install the cam locknuts. Adjust nuts to center cam on shaft.



Fig.7. Centering cam on shaft

- C. Use an arbor to press bearing cones onto shaft. Coat shaft and bearing bore with anti-sieze lubricant prior to pressing. If a heat gun is available it is recommended that the bore of the bearing be heated prior to pressing.
- D. Install the input cartridges. Be sure to install the same exact shims or equivalent height as was removed in disassembly Step 9C.
- E. Tighten cartridge mounting screws.
- F. If endplay exists remove an equal amount of shims from each side until there is a small amount of drag from preloading the bearings. In rare instances it may be necessary to re-machine the cartridges if all shims have been removed and endplay still exists.

3. ASSEMBLING OUTPUT SHAFT.

- A. Install the large bearing cones on the output shaft. Coat the bore of the cone with an anti-sieze lubricant prior to installation. Tap in place with a hammer and aluminum bar. Place the bar against the inner face and tap with hammer. Alternate from side to side to avoid binding until the bearing is fully seated on the output/follower wheel.

- B. Install the bearing retainer capscrews and washers. Use torque and Loc-Tite recommendations from the "General Service Manual".

- C. Install new followers with an arbor press.

CAUTION: Be sure to press the followers in straight as damage to the follower and wheel could occur if improperly aligned during installation. Be sure that the notches are aligned with the setscrew holes.

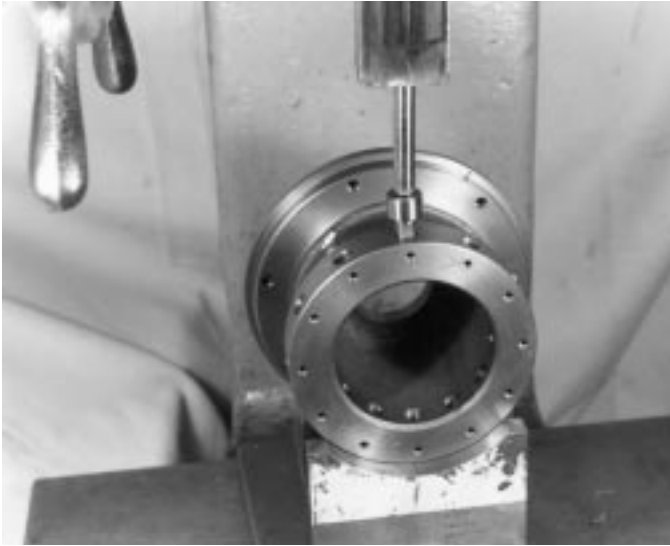


Fig. 8 Pressing in new followers

- D. Install the setscrews with double-notch followers, the cone point setscrews lock into the "V" notch. The cup point setscrews lock against the flat single-notch followers, use an oval point setscrew. Be sure to use Loc-tite thread locking liquid as recommended in the "General Service Manual".
- E. Coat the inside of the bearing retainer ring and the outside of the main output bearing with anti-sieze lubricant. Place the bearing retainer ring over the output from the topside of the output/follower wheel and tap, alternating from side to side until the retainer is fully seated on the bearing.
- F. Replace the shims removed in disassembly step 4C.
- G. Place cam in dwell position, keyway pointing rearward.
- H. Insert output/follower wheel into housing with dowel holes in housing in line with retainer.
- I. Loosely install the bearing retainer capscrews.
- J. Install only one of the dowel pins through the retainer ring into the housing.

4. SETTING THE CAM.

CAUTION: This mechanism is designed to operate with adjacent followers in close contact along their entire width, unless this condition is achieved by proper installation, the mechanism will not transmit its rated load, and serious damage to the cam and output shaft will occur.

- A. Place the unit on end or its side so both the output side and the bottom opening are accessible.
- B. Place the cam in dwell, keyway facing rearward.
- C. While pivoting on the one dowel pin, rotate the output towards the input shaft as much as the clearance holes for the mounting capscrews will allow.
- D. Shift the cam axially until two adjacent followers are in full contact with the cam rib. This will also require adjustment of the output retaining ring along with axial adjustment of the cam.
 - 1) If there is a gap at the root of the follower the cam should be shifted toward the follower.
 - 2) If there is a gap at the tip of the follower the cam should be shifted away from the follower.

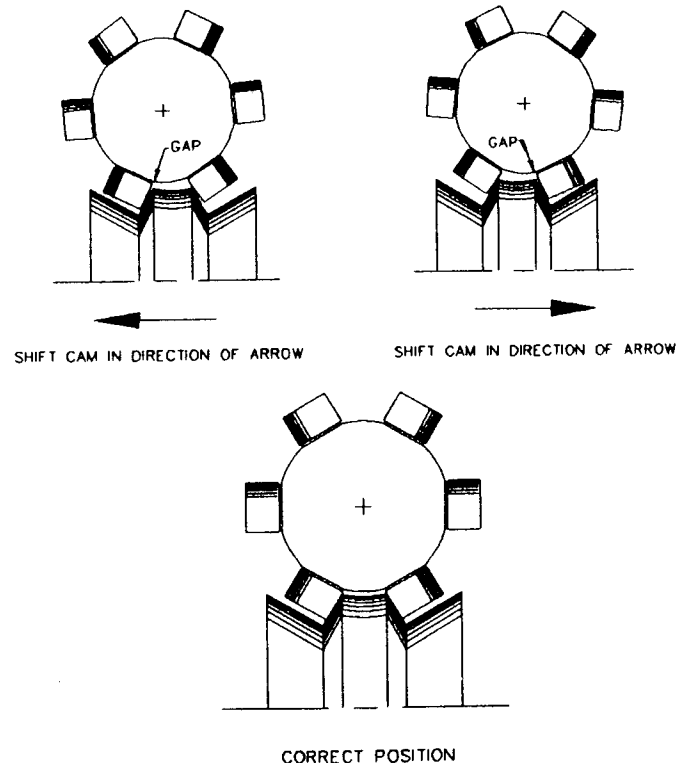


Fig.9 Shifting cam for proper alignment

- E. Apply "Prussian Blue" to entire cam track.
- F. Rotate the camshaft slowly with a small handcrank to ensure that:
- 1) Both rollers are in contact with the cam rib in dwell. Look for uniform blueing pattern.
 - 2) The follower is free when it is in the center of the crossover track.
 - 3) You do not encounter unusual resistance in motion. The bluing pattern should be fairly uniform from side to side during motion. If a patch of bluing is worn off the outside of the cam rib on one side of the cam and not the other, shift the cam a .002 to .005 inches in the direction of the worn side. Do not overshift the cam or knocking will occur.
 - 4) The cam bluing should never be worn off the lead-in or exit edges of the cam ribs. This would indicate that the cam is not adjusted properly.
 - 5) There should be no looseness in any dwell. If there is looseness adjust the output bearing retainer to slightly preload the loosest dwell.
- G. Tighten the locknuts and secure with Loc-Tite #242 as specified in the "General Service Manual". If lockwashers are used on your model, bend the tangs over the nut to insure locking.

H. Tighten the output retaining ring capscrews.

- I. Drill and ream the remaining hole in the output retaining ring to accept the next larger dowel pin. Install new dowel.

8. REINSTALL THE BOTTOM COVER. Apply "General Electric Silicone Rubber RTV-6" to the sealing surfaces of the housing and cover. Place the gasket on the housing and place cover over the gasket. Install and tighten capscrews.

9. GREASE PACK THE MAIN OUTPUT BEARING with lubricant specified in the "General Service Manual".

10. INSTALL NEW OIL SEALS as described in the "General Service Manual".

11. FILL THE INDEX WITH THE RECOMMENDED OIL to level indicator. See "General Service Manual". Too high an oil level will cause no damage. Too low a level may result in unit failure.

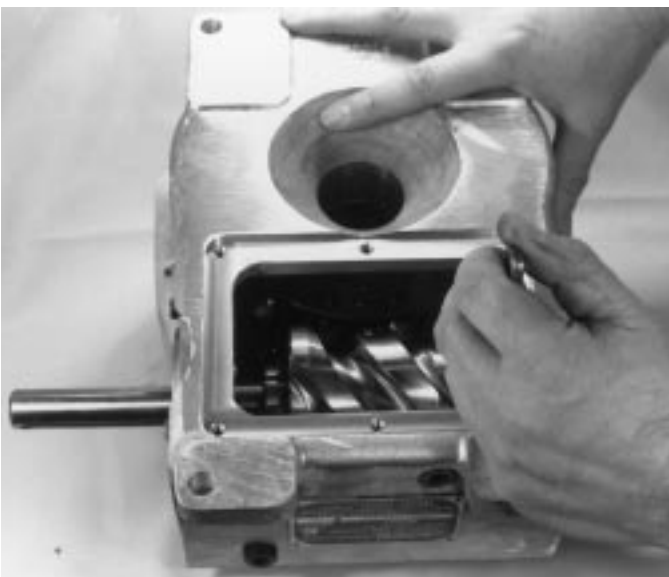


Figure 10 Tighten cam locknuts

HOW TO ORDER PARTS

Please refer to parts list shown in this manual. This parts list is for a standard Index Drive. If you feel your drive is nonstandard or you are in doubt you should contact CAMCO Customer Service at (847) 459-5200 and request a Bill of Materials for your specific unit based on serial number. CAMCO maintains records on all units for a period of ten years.

You may order parts per the standard Bill of Material even if your unit is nonstandard. CAMCO's order entry department will review the closed order file based on the following information and supply you with the correct part.

REQUIRED INFORMATION

1. Original purchase order number (if available)
2. Customer name (original purchaser of drive)
3. Model number (located on name plate)
4. Serial number (located on name plate)
5. Approximate date of purchase.

TO ORDER PARTS contact CAMCO "Order Entry Department" Wheeling, Illinois

Phone (847) 459-5200 or Fax (847) 459-3064

- A. Describe the parts required and the 14 digit part number as listed in the Standard Bill of Materials or a Special Bill of Materials pertaining to your unit. State if you are using a Standard or Specific bill of material.
- B. Give as much of the above required information as possible.

ON WARRANTY


CAMCO will send replacement parts freight prepaid via most practical mean.

CAMCO will issue a "Returned Material Authorization Number" (RMA#) for the return of defective parts for inspection. CAMCO will bill customer for repair parts. When inspection of returned parts has been completed and determined to be covered under warranty, CAMCO will issue a credit to the customer for the repair parts and freight charges. Camco standard warranty is defined in Camco's "Terms and Conditions".

ON NON-WARRANTY

Replacement or spare parts, with approved credit, are F.O.B. our plant Wheeling, Illinois.

601RDM, 902RDM, 1305RDM & 1800RDM

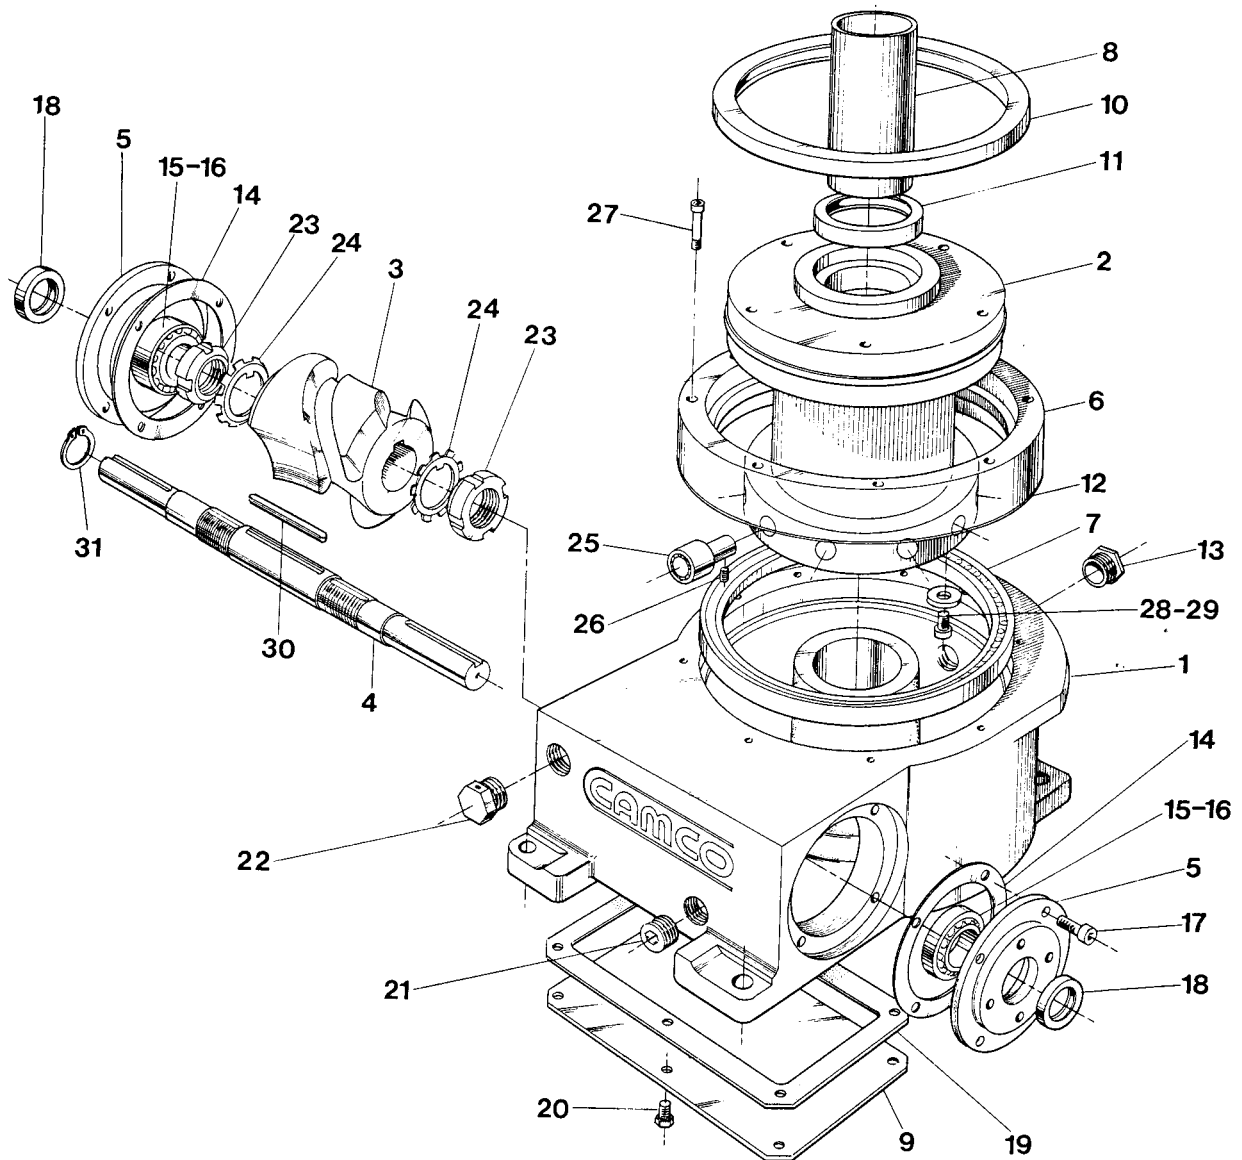

PARTS LIST FOR 601RDM INDEX DRIVE (STANDARD CONFIGURATION)

| <u>ITEM NO.</u> | <u>PART NUMBER</u> | <u>DESCRIPTION</u> |
|-----------------|--------------------|------------------------------------|
| 1 | 51D51194001002 | Housing |
| 2 | 51C38781014012 | Follower wheel 12 hole |
| | 51C38781024016 | Follower wheel 16 hole |
| 3 | | Cam, (specify number of stops and |
| | | Index time, contact camco for |
| | | Assistance, order in matched sets) |
| 4 | 51C37687007002 | Input shaft (w/o red or w/180SM) |
| | 51C52700007002 | Input shaft (for 7200C) |
| | 51C65588007002 | Input shaft (for 180SM/180-IOC) |
| 5 | 51C51099003001 | Cartridge, input |
| 6 | 51C37690000000 | Bearing retainer |
| 7 | 86A27251000000 | Bearing |
| 8 | 51A52302000000 | Tube,through hole |
| 9 | 51B52264000000 | Cover, bottom |
| 10* | 84D07329780000 | Oil seal C/R 64993 |
| 11* | 84D07329340000 | Oil seal C/R 19745 |
| 12* | 51B27248018800 | Shim, .002 |
| * | 51B27248028800 | Shim, .005 |
| * | 51B27248038800 | Shim, .010 |
| * | 51B27248048800 | Shim, .015 |
| 13 | 95A33001010000 | Sight plug 3/8-18 |
| 14* | 51B52278018800 | Shim, .002 |
| * | 51B52278028800 | Shim, .005 |
| * | 51B52278038800 | Shim, .010 |
| 15* | 86D07328120021 | Bearing cone LM11949 |
| * | 86D07328070021 | Bearing cone A6075 |
| * | 86D07328210021 | Bearing cone 17119 |
| 16* | 86D07328120022 | Bearing cup LM11910 |
| * | 86D07328070022 | Bearing cup A6157 |
| * | 86D07328210022 | Bearing cup 17244 |
| 17 | 95A26000390000 | S.H.C.S. 1/4-20 x 5/8 |
| 18* | 84D07329080000 | Oil seal C/R 7443 |
| * | 84D07329180000 | Oil seal C/R11878 |
| 19 | | Not used on 601RDM |
| 20 | 95A26003140000 | B.H.C.S. 10-24 x 3/8 |
| 21 | 95A33003010000 | Magnetic plug |
| 22 | 95A33000010000 | Air vent 3/8-18 |
| 23 | 95A26009050000 | Locknut |
| 24 | 95A26010050000 | Lockwasher |
| 25 | 82C33150020003 | Cam follower |
| 26* | 95A26012070000 | S.S.S. oval 10-24 x 3/8 |
| 27 | 95A26000430000 | S.H.C.S. 1/4-20 x 1 1/4 |
| 28 | 95A26000530000 | S.H.C.S. .31 x .62 |
| 29 | 99A27266000000 | Flat washer |
| 30 | 025K200 | Key .250 SQ. X 2.00 |
| 31 | | Not used on 601RDM |
| 32 | 51C39452000000 | Stationary output shaft |
| 33* | 84A54015000000 | O-ring 2-234 |
| 34 | | Not used on 601RDM |
| 35 | 26B01051049000 | Spacer output |
| 36* | 99A44547070000 | Service manual for RDM |
| 37* | 99A44547010000 | General service manual |

* Indicates parts supplied with Spare Parts Kit #SPK601RDM

PARTS LIST FOR 902 RDM INDEX DRIVE (STANDARD CONFIGURATION)

| <u>ITEM NO.</u> | <u>PART NUMBER</u> | <u>DESCRIPTION</u> |
|-----------------|--------------------|--------------------------------------------|
| 1 | 56D59101001002 | Housing Standard |
| | 56C44335001002 | Housing W/ Center Post/Tooling |
| | 56D41866001002 | Housing W/PI Mounting Holes |
| | 56C38728001002 | Housing W/Stationary Center Post |
| 2 | 56C38768014012 | Follower Wheel 12 Hole H32 |
| | 56C38768024016 | Follower Wheel 16 Hole H32 |
| 3 | _____ | Cam, (Specify Number Of Stops And |
| | _____ | Index Time, Contact Camco For |
| | _____ | Assistance, Order In Matched Sets) |
| 4 | 56C38713007002 | Input Shaft (No Reducer) |
| | 83D36422007002 | Input Shaft (For R250) |
| | 56C39230007002 | Input Shaft (For 25GED) |
| | 56C63374007002 | Input Shaft (For R225) |
| | 56D63506007002 | Input Shaft (For R225 W/IOC) |
| | 56C51857007002 | Input Shaft (For R260) |
| | 56D61647007002 | Input Shaft (For R260 W/ 20 DHL) |
| | 83D47856007002 | Input Shaft (For R250 Dual C/L) |
| 5 | 56C36428003021 | Cartridge Open (Inp) |
| 6 | 56C23495009300 | Retainer Bearing |
| 7 | 86A24320000000 | Bearing |
| 8 | _____ | Not Used On 902RDM |
| 9 | 56B35134009600 | Cover, Bottom |
| 10* | 84D07329860000 | Oil Seal C/R 95052 |
| 11* | 84D07329500000 | Oil Seal C/R 27280 |
| 12* | 56B36432018800 | Shim, .002 |
| * | 56B36432028800 | Shim, .005 |
| * | 56B36432038800 | Shim, .010 |
| 13 | 95A33001010000 | Sight Plug 3/8-18 |
| 14* | 56C36423018800 | Shim, .002 |
| * | 56C36423028800 | Shim, .005 |
| * | 50B06038028800 | Shim, .005 |
| * | 56C36423038800 | Shim, .010 |
| 15* | 86A22882000021 | Bearing Cone Lm67049 |
| 16* | 86A22882000022 | Bearing Cup Lm67010 |
| 17 | 95A26000390000 | S.H.C.S. 1/4-20 X 5/8 |
| 18 | 84D07329180000 | Oil Seal C/R11878 |
| 19 | _____ | Not Used On 902RDM |
| 20 | 95A26015220000 | H.H.C.S. 10-24 X 1/2 |
| 21 | 95A33003010000 | Magnetic Plug |
| 22 | 95A33000010000 | Air Vent 3/8-18 |
| 23 | 95A26009070000 | Locknut |
| | 95A26009080000 | Locknut |
| 24 | _____ | Not Used On 902RDM |
| 25 | 82C33150040003 | Cam Follower |
| 26* | 95A26012130000 | S.S.S. Oval Pt 1/4-20 X 3/8 |
| 27 | 95A26000580000 | S.H.C.S. 5/16-18 X 1 1/2 |
| 28 | 95A26016450000 | S.H.C.S. 3/8-24 X 3/4 |
| 29 | 99A24322000000 | Heavy Duty Flat Washer |
| 30 | 031K300 | Key .3125 Sq. X 3 |
| 31 | 95A33033170000 | Retaining Ring 5160-125 |
| 32 | 56L26076009540 | Stationary Output Shaft |
| | 56C58129009540 | Stationary Output Shaft For 10.50 Mounting |
| 33* | 99A26350000000 | O Ring Parker #236 |
| * | 84A56357000000 | O-Ring 2-155 Buna N |
| * | 84A36425000000 | O-Ring Parker #-136 |
| 34 | 56C63181009100 | Mounting Plate (For R225) |
| | 56D36427003021 | Mounting Plate (For R250) |
| | 80C39416009100 | Mounting Plate (For Red) |
| | 80C51855000000 | Mounting Plate (For R260) |
| 35 | _____ | Not Used On 902 RDM |
| 36* | 99A44547070000 | Service Manual-RDM |
| 37* | 99A44547010000 | General Service Manual |

* Indicates parts supplied with Spare Parts Kit #SPK901RDM

PARTS LIST FOR 1100RDM INDEX DRIVE (STANDARD CONFIGURATION)

| <u>ITEM NO.</u> | <u>PART NUMBER</u> | <u>DESCRIPTION</u> |
|-----------------|----------------------|----------------------------------------------------------------------------|
| 1..... | H3G83982001002 | Housing |
| 2..... | H3D83808034010 | Follower wheel (10 hole, 1.25" followers) |
| 2..... | H3D83994024010 | Follower wheel (10 hole, 1.50" followers) |
| 2..... | H3D83808014012 | Follower wheel (12 hole, 1.25" followers) |
| 2..... | H3D83994014012 | Follower wheel (12 hole, 1.50" followers) |
| 2..... | H3D83808024016 | Follower wheel (16 hole, 1.25" followers) |
| 2..... | H3D83996014018 | Follower wheel (18 hole, 1.00" followers) |
| 2..... | H3D83808044018 | Follower wheel (18 hole, 1.25" followers) |
| 2..... | H3D83996024020 | Follower wheel (20 hole, 1.00" followers) |
| 2..... | H3D83996034024 | Follower wheel (24 hole, 1.00" followers) |
| 3..... | | Cam (specify number of stops and index period. Contact IMC for assistance) |
| 4..... | H3D83805007002 | Input Shaft (without reducer) |
| 4..... | H3D83993007002 | Input Shaft (for 7300C reducer) |
| 4..... | H3D84091007002 | Input Shaft (for KH47 reducer) |
| 5..... | H3C83803003002 | Input Cartridge |
| 5..... | 84B60170140000 | O-Ring 2-160 |
| 6..... | 09C29030009300 | Bearing Retainer |
| 6..... | 95A26007670000 | Dowel Pin 1/2 X 2-1/2 |
| 7..... | 86A29059000000 | Output Bearing |
| 8..... | | Not used on 1100RDM |
| 9..... | H3B83807000000 | Cover, Bottom |
| *10..... | 84D74734900000 | Oil Seal C/R 1150112 |
| *11..... | 84C65421670000 | Oil Seal C/R 59010 |
| *12..... | 09B29064018800 | Shim .002 (Output) |
| *12..... | 09B29064028800 | Shim .005 (Output) |
| *12..... | 09B29064038800 | Shim .010 (Output) |
| 13..... | 95A33001020000 | Sight glass 1/2-14 |
| *14..... | H3B84022018800 | Shim .002 (Input) |
| *14..... | H3B84022028800 | Shim .005 (Input) |
| *14..... | H3B84022038800 | Shim .010 (Input) |
| *15..... | 86D07328360021 | Bearing Cone 26885 |
| *16..... | 86D07328280022 | Bearing Cup 26822 |
| 17..... | 95A33040330000 | SHCS M8 X 20 MM |
| *18..... | 84C65421170000 | Oil Seal C/R 15845 |
| 20..... | 95A37940310000 | HHCS M8 X 12 |
| 21..... | 95A33003020000 | Magnetic Plug |
| 22..... | 95A33000020000 | Air Vent 1/2-14 |
| 23..... | 95A26009100000 | Locknut PN-10 |
| 24..... | 95A26010100000 | Lockwasher W-10 |
| 25..... | 0570602601 | Cam Follower F-100 (1.00" / H32) |
| 25..... | 0570602602 | Cam Follower F-125 (1.25" / H40) |
| 25..... | 0570602603 | Cam Follower F-150 (1.50" / H48) |
| *26..... | 95A33041280000 | SSS CUP PT M6 X 10 |
| 27..... | 95A33040550000 | SHCS M10 X 50 |
| 28..... | 95A33040650000 | SHCS M12 X 25 |
| 29..... | 95A26021260000 | Washer |
| 30..... | 050K425..... | Key 1/2 SQ.X 4 1/4 |
| 32..... | H3C84025000000 | Stationary Center Post |
| 34..... | 80C83992009100 | Mounting Plate (7300C Reducer) |
| 34..... | 80C84093009100 | Mounting Plate (KH47 Reducer) |
| 36..... | 99A44547070000 | Service Manual for RDM |
| 37..... | 99A44547010000 | General Service Manual |

* Indicates parts supplied with Spare Parts Kit #SPK1100RDM

PARTS LIST FOR 1305RDM INDEX DRIVE (STANDARD CONFIGURATION)

| <u>ITEM NO.</u> | <u>PART NUMBER</u> | <u>DESCRIPTION</u> |
|-----------------|--------------------|------------------------------------|
| 1 | 57G41046001002 | Housing |
| 2 | 57C42229014012 | Follower Wheel 12 Hole |
| | 57C42229024016 | Follower Wheel 16 Hole |
| 3 | | Cam, (Specify Number Of Stops And |
| | | Index Time, Contact Camco For |
| | | Assistance, Order In Matched Sets) |
| 4 | 57D40902007002 | Input Shaft (W/O Reducer) |
| | 57D42389007002 | Input Shaft (For 7350C, 30DHL) |
| | 57D43552007002 | Input Shaft (For 7300C, 30DHL) |
| | 57D43807007002 | Input Shaft (For 7350C) |
| 5 | 57C40930003002 | Cartridge, Input |
| 6 | 57D42236000000 | Retainer Bearing |
| 7 | 86A42226000000 | Bearing |
| 8 | | Do Not Use On 1305RDM |
| 9 | 57B40937000000 | Cover, Bottom |
| 10* | 84A41047000000 | Oil Seal C/R 1450242 |
| 11* | 84A41048000000 | Oil Seal C/R 57510 |
| 12* | 57B42238018800 | Shim .002 |
| * | 57B42238028800 | Shim .005 |
| * | 57B42238038800 | Shim .010 |
| 13 | 95A33001020000 | Sight Plug 1/2-14 |
| 14* | 57B40958018800 | Shim .002 |
| * | 57B40958028800 | Shim .005 |
| * | 57B40958038800 | Shim .010 |
| 15* | 86D07328460021 | Bearing Cone 45287 |
| 16* | 86D07328460022 | Bearing Cup 45220 |
| 17 | 95A26000700000 | S.H.C.S. 3/8-16 X 7/8 |
| 18* | 84D07329380000 | Oil Seal C/R 21336 |
| 19 | 57B40938000000 | Gasket, Bottom Cover |
| 20 | 95A26002140000 | HHCS 5/16-18 X 5/8 |
| 21 | 95A33003020000 | Magnetic Plug |
| 22 | 95A33000020000 | Air Vent 1/2-14 |
| 23 | 95A26009140000 | Locknut |
| 24 | 95A41521140000 | Lockwasher |
| 25 | 82C10457060003 | Cam Follower |
| 26* | 95A26005450000 | S.S.S. Cup 1/4-20 X 1/2 |
| * | 95A26006210000 | S.S.S. Cone 1/4-20 X 1/2 |
| 27 | 95A26001100000 | S.H.C.S. 1/2-13 X 2 1/4 |
| 28 | 95A26001050000 | S.H.C.S. 1/2-13 X 1 |
| 29 | 95A26021260000 | Flat Washer 6002 |
| 30 | 062K475 | Key .625 Sq. X 4.75 |
| 31 | | Not Used On 1305RDM |
| 32 | 57C41192000000 | Stationary Output Shaft |
| 33 | | Not Used On 1305RDM |
| 34 | 80C44620000000 | Mounting Plate (For 7300C) |
| | 80D44630000000 | Mounting Plate (For 7350C) |
| 35 | | Not Used On 1305RDM |
| 36* | 99A44547070000 | Service Manual-RDM |
| 37* | 99A44547010000 | General Service Manual |

* Indicates parts supplied with Spare Parts Kit #SPK1305RDM

PARTS LIST FOR 1800RDM INDEX DRIVE (STANDARD CONFIGURATION)

| <u>ITEM NO.</u> | <u>PART NUMBER</u> | <u>DESCRIPTION</u> |
|-----------------|--------------------|------------------------------------|
| 1 | H2G48562001002 | Housing |
| 2 | H2D48544014012 | Follower Wheel 12 Hole |
| | H2D48544024016 | Follower Wheel 16 Hole |
| 3 | _____ | Cam, (Specify Number Of Stops And |
| | | Index Time, Contact Camco For |
| | | Assistance, Order In Matched Sets) |
| 4 | H2D48524007002 | Input Shaft (W/O Red) |
| | H2D48525007002 | Input (Shaft For 7400C) |
| | H2D48731007002 | Input Shaft (For 7500C) |
| | H2D50672007002 | Input Shaft (For 7400C/400-IOC) |
| | H2D55014007002 | Input Shaft (For 7500C/500-IOC) |
| 5 | H2C64443003002 | Cartridge Input |
| 6 | H2D64003000000 | Bearing Retainer |
| 8 | _____ | Not Used On 1800RDM |
| 9 | 56B35134009600 | Cover Bottom |
| 10* | 84A48576000000 | Oil Seal 2050252 |
| 11* | 84A48577000000 | Oil Seal 75030 |
| 12* | H2B48578018800 | Shim, .002 |
| * | H2B48578028800 | Shim, .005 |
| * | H2B48578038800 | Shim, .010 |
| 13 | 95A33001030000 | Sight Plug 3/4-14 |
| 14* | H2B48579018800 | Shim, .002 |
| * | H2B48579028800 | Shim, .005 |
| * | H2B48579038800 | Shim, .010 |
| 15* | 86D07328600021 | Bearing Cone 566 |
| 16* | 86D07328600022 | Bearing Cup 563 |
| 17 | 95A26000710000 | S.H.C.S. 3/8-16 X1 |
| 18* | 84D07329510000 | Oil Seal C/R 27295 |
| 19 | H2C48539000000 | Gasket, Cover 1800RDM |
| 20 | 95A26003140000 | B.H.C.S. 10-24 X 3/8 |
| 21 | 95A33003060000 | Magnetic Plug |
| 22 | 95A33000030000 | Air Vent 3/4-14 |
| 23 | 95A26009160000 | Locknut Pn-16 |
| 24 | 95A41521160000 | Lockwasher Wh-16 |
| 25 | 82C10457080003 | Cam Follower Cfh 292 |
| 26* | 95A26005470000 | S.S.S. Cup Pt 1/4-20 X 3/4 |
| 27 | 95A26001300000 | S.H.C.S. 5/8-11 X 2 1/2 |
| 28 | 95A26001260000 | S.H.C.S..5/8-11 X 1 1/2 |
| 29 | 95A26021270000 | Washer Flat 6003 |
| 30 | 075K650 | Key .750 Sq X 6.50 Lg |
| 31 | H2D64002000000 | Retaining Ring, 1800RDM Mach |
| 32 | H2C48734000000 | Stationary Output Shaft |
| 33 | _____ | Not Used On 1800RDM |
| 34 | 80D48720000000 | Mounting Plate (For 7400C) |
| | 80C48730009100 | Mounting Plate (For 7500C) |
| 35 | _____ | Not Used On 1800RDM |
| 36* | 99A44547070000 | Service Manual-RDM |
| 37* | 99A44547010000 | General Service Manual |

* Indicates parts supplied with Spare Parts Kit #SPK1800RDM



A **DOVER** COMPANY

Automation

Robohand FERGUSON

CAMCO

Industrial Motion Control, LLC
CAMCO & FERGUSON Products
1444 South Wolf Road
Wheeling, IL 60090
USA
ph: 847-459-5200
toll-free: 800-645-5200
fax: 847-459-3064
camco@destaco.com
www.camcoindex.com

ISO 9001:2000 Registered

DE-STA-CO Headquarters
Auburn Hills, Michigan USA
248-836-6700
marketing@destaco.com

www.destaco.com

DE-STA-CO Europe
Germany
+49-6171-705-0
europe@destaco.com

DE-STA-CO Asia
Thailand
+66-2-326-0812
info@destaco.com

DE-STA-CO South America
Brazil
0800-124070
samerica@destaco.com

This publication is for information purposes only and should not be considered a binding description of the product except as confirmed in writing by Industrial Motion Control, LLC/DE-STA-CO

© Industrial Motion Control, LLC 2009
All rights reserved
Printed in U.S.A.
SKU 0065-04/2017